

INSTRUCTIONS/PARTS LIST FOR TILLERS WITH REVERSE

PLEASE KEEP THIS SHEET WITH YOUR OWNERS MANUAL

MT and TP Series Tillers

Setup for tillers with reverse is the same as other units except for the following: The throttle control mounts through the handle panel. The reverse control cable will be found coming through a loop on the rear of the chassis. Attach the clutch spring through the hole in the left hand clutch lever and crimp the loop so it cannot come out of the lever, but is free to swing in the hole. Attach the chain of the reverse control cable to the spring, selecting a loop that will stretch the spring approximately one quarter of an inch when the clutch lever is pulled up to the handle bar. Assure that the lever works freely and that the cable is slack when the lever is released. When operating, the tines will turn much slower and with much less power in reverse than when in forward.

The following parts are used in addition to, or in place of, parts listed in the owners manual.

<u>Ref No.</u>	<u>Part No.</u>	<u>Description</u>
*1	359658	Belt Keeper (on engine)
*2	271688	Pulley-9", Double Groove
3	272230	Belt-Reverse
*4	359659	Belt Cover
5	130652	Handle Bar Assembly, L.H.
6	338009	Idler Pulley-Reverse
7	359657	Idler Arm-Reverse
8	359656	Idler Arm Stop ("L" Bracket)
9	336652	Reverse Pulley (on engine)
10	359654	Spring-Reverse Idler Arm
11	463013	Key-Woodruff #405
*12	359516	Idler Arm Weldment Forward
13	359720	Cable-Reverse
*14	359660	Handle Panel
*15	162026	Throttle Control

* Indicates that part is different from part shown in owners manual.